

Important Notes

- ◆ You must use the manual flight mode if you want to send goods with air freight.
- ◆ Please place a battery label if you send more than one device per consignment.
- ◆ The batteries of tempmate.[®]-GS are two non-exchangeable CR17450 lithium batteries.
- ◆ A stopped device cannot be started again.
- ◆ Do not place devices into corrosive liquid or expose to direct heat.
- ◆ Store devices under room temperature conditions and do not use expired devices.
- ◆ Please dispose devices according to local laws and regulations (electronic waste).

Visit www.tempmate.cloud for further information.

imec Messtechnik GmbH
Lilienthalstr. 23
74078 Heilbronn
Germany

info@imec-group.com
www.tempmate.com



Please, follow these instructions in order to put your device into operation.



Sign in or register at www.tempmate.cloud.



Enter the serial number of the device you want to register, by choosing **Devices - Add New Device** in the menu.



Choose your settings in order to configure the device or use the default settings.



Start your device by pushing the button for at least 5 seconds. While pushing, the **green LED** is lit. A successful start is indicated by 10 times flashing **green LED**.



An active device is indicated by flashing **green** or **red** LED every 5 seconds.

- ◆ **green = OK; no alarm**
- ◆ **red = alarm**
- ◆ **blue = the last upload was successful**



You can monitor your active device in your tempmate.®-Cloud account.



To stop the device you must push the button for at least 5 seconds. While pushing, the **red LED** is lit. A successful stop is indicated by 10 times flashing **red LED**.

→ **Find more important notes on the back.**