




# INNOLOG PRO


## The ultimate Single-use Temperature recorder

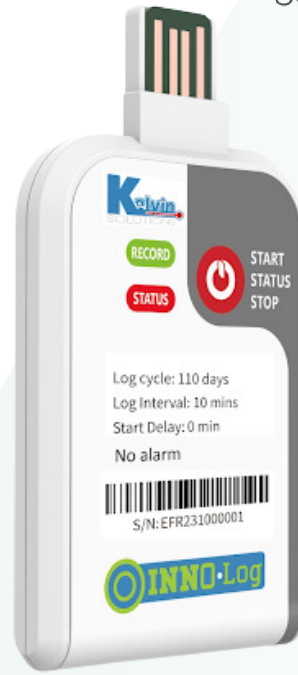

Pharmacy



Fresh

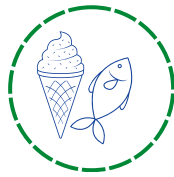

Frozen



Technical

### ENHANCED CAPABILITIES

18 months shelf life


Automatic PDF & CSV report on board

Up to 180 days recording

Come with a 6 points Certificate of Validation

Secure and easy download of encrypted data files

up to 4 alarms limit

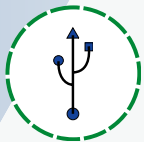

#### Built-in USB Connector

Directly connect to computer, no cable required



#### Qualified for air transport use

Complies to RTCA/DO-160G environmental Conditions, qualified for air transport under active status



#### IP67 Protection Class

Food-grade and water-proof packaging



#### DRM data rescue memory

Save data when the device is not started




#### Automatic PDF generation

No software required



#### STG compatible


Can be read directly by smartphone

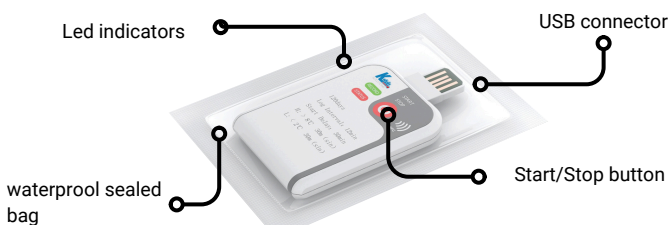

# TECHNICAL SPECIFICATIONS


DEVICE TYPE	Electronic single use temperature data logger
SENSOR TYPE	Internal digital
TEMPERATURE UNIT	° C or ° F
TEMPERATURE RANGE	-30°C to +70°C
ACCURACY	+0.5°C / 0.9°F from -20°C to +40°C / 1.8 °F
RESOLUTION	0.1° C / °F
REFERENCE TIME ZONE	UTC +00 (UTC=GMT)
STORAGE CAPACITY	16.000 measurements
RECORDING INTERVAL	10 min - factory adjustable from 10s to 24h
STANDARD START DELAY	0 min - adjustable from 10s to 12h
STANDARD TRIP DURATION / MAXIMUM TRIP DURATION	110 days / 180 days
SHELF LIFE	18 months
START / STOP MODE	Push start/stop button
STATUS INDICATOR	Power on and alarm indication led
PDF REPORTING PROTECTION	Using password adjustable in factory
REPORTING	Automatic generation of PDF and CSV reports - Validation certificate in memory
DATA RESCUE MEMORY	Automatic temperature record evry 1h even if device not started - Loop recording
COMPUTER INTERFACE	USB 2.0
SIZE AND WEIGHT	75 x 42 x 8 mm / 20g
STANDARD ALARMS	Single event or cumulative, up to 4 alarms
IP RATING	IP 67
BATTERY	UN 38.3 compliant (device classified as non-dangerous goods)
PACKING	Boxes of 50 units
INNOLOG SOFTWARE COMPATIBILITY	Wndows, Mac

**1**




Click the START button to turn on and enable Innolog™ Pro. The data logger is preconfigured and ready to use.

**2**




Insert enabled Innolog™ Pro in the delivery.

**3**



Remove the device from the delivery and click STOP to disable it. Connect Innolog™ Pro directly to the computer USB port.

**4**



The report (in PDF and CSV format) will download automatically without any software installation.